



(c) Remove the 2 bolts.

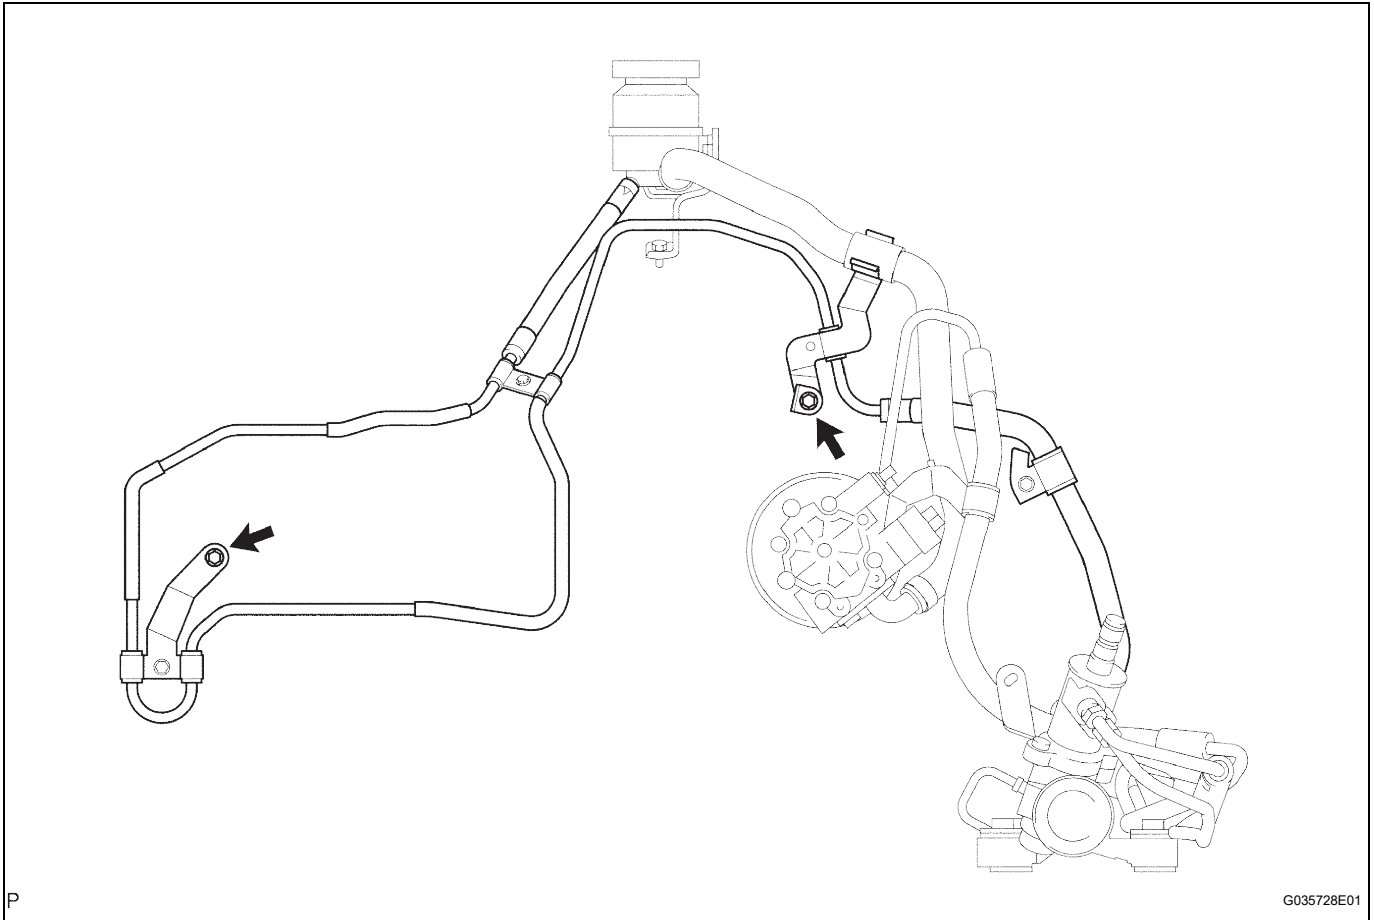

EM

(d) Remove the 2 bolts and No. 1 oil reservoir bracket.

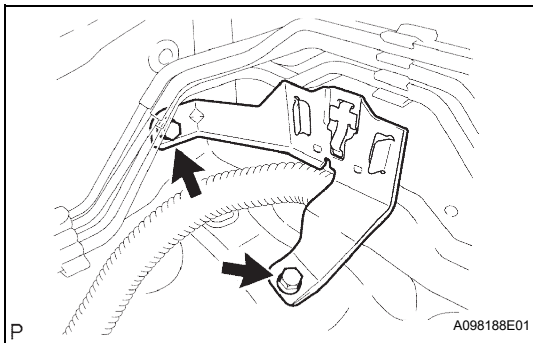

(e) Remove the bolt of the wire harness protector.
(f) Disconnect the 2 clamps of the engine wire.

